

## Hauptständer

TRIUMPH Tiger 800

(-2014)

Art.-Nr.: 5057505 00 01 schwarz

TRIUMPH Tiger 800 XR / XRX / XRT

(2015-)

Art.-Nr.: 5057536 00 01 schwarz



## Montage

### Inhalt:

- 1x 700007606 Hauptständer
- 1x 700007607 Anschlaghalter
- 1x 700010613 Schraubensatz:
- 1x 700007608 Feder spezial
- 1x 700007611 Federverlängerung
- 1x Anschlaggummi
- 2x Gewindebuchsen M10
- 1x Zylinderschraube M10x25
- 1x Aludistanz  
Ø13xØ7x7mm
- 1x Aludistanz  
Ø25xØ11x5mm
- 2x Zylinderschraube  
M10x45
- 1x Stahldistanz  
Ø10xØ7x7mm
- 1x Linsenkopfschraube  
M8x20
- 1x Sechskantschraube  
M6x25
- 4x U-Scheiben Ø10,5
- 1x Karosseriescheibe  
Ø6,4xØ18
- 1x U-Scheibe Ø8,4
- 1x selbstsichernde Mutter M10

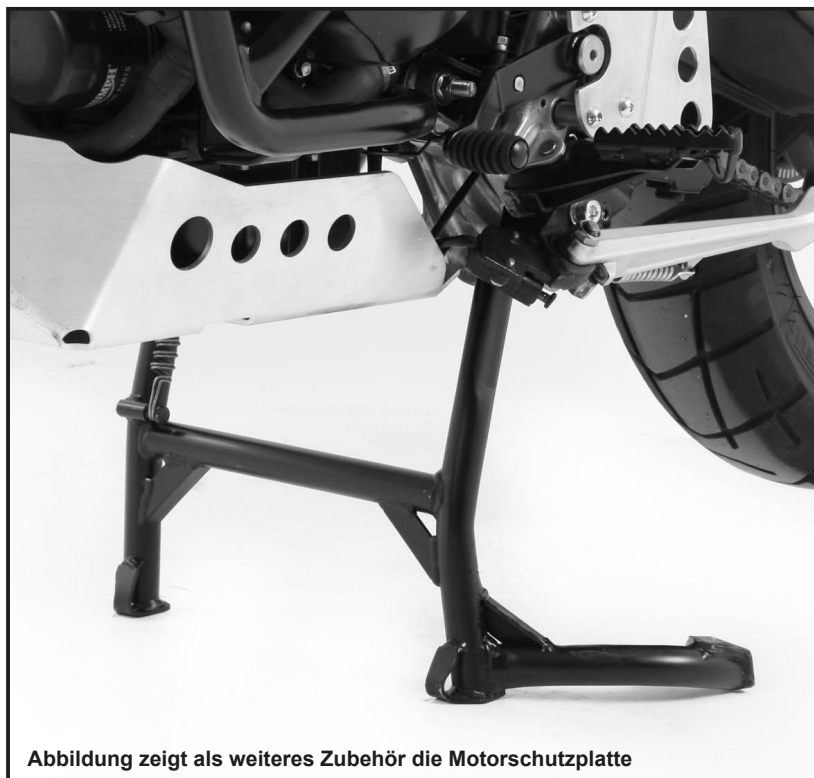


Abbildung zeigt als weiteres Zubehör die Motorschutzplatte

**Bitte kontrollieren Sie nun die Funktionalität Ihres Hauptständers und überprüfen Sie die Festigkeit aller montierten Teile. Schrauben mit flüssiger Schrauben-Sicherung einkleben.**

**Nehmen Sie das Motorrad vom Hauptständer und kontrollieren Sie den Hauptständer nach der Montage auf das selbstständige Hochklappen in die obere Endlage.**

**Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.**

**Die Kurvenfreiheit kann durch einen Hauptständer eingeschränkt werden.**

### Allgemein:

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von HEPCO & BECKER gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben mit folgenden Werten anziehen:

M 6 - 9,6 Nm    M 8 - 23 Nm    M 10 - 46 Nm

Gegebenfalls die Schraubverbindungen mit Schraubensicherung zusätzlich sichern.



**Hepco & Becker GmbH**  
**An der Steinmauer 6**

**D-66955 Pirmasens**

**Tel.: 06331 - 1453 - 100**

**Fax: 06331 - 1453 - 120**

**eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)**

**[www.hepco-becker.de](http://www.hepco-becker.de)**

# Hauptständer

TRIUMPH Tiger 800

(-2014)

Art.-Nr.: 5057505 00 01 schwarz


TRIUMPH Tiger 800 XR / XRX / XRT

(2015-)

Art.-Nr.: 5057536 00 01 schwarz



## Montage

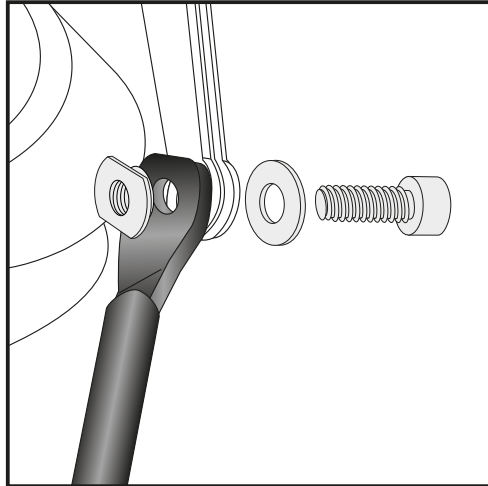


**1**

### Befestigung des Hauptständers rechts:

Unterhalb der Fußraste an der freien Bohrung mit der Zylinderschraube M10x25 sowie der U-Scheibe Ø10,5. Von hinten mit der Gewindebuchse M10 verschrauben. Drehflächen zuvor einfetten.


**Sicherungsmittel verwenden.**




1x



1x



1x

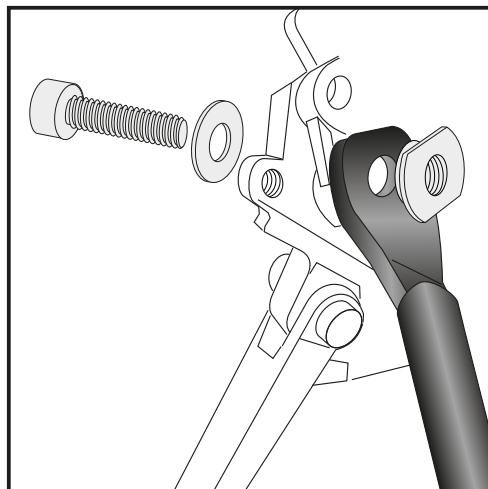

**2**

### Befestigung des Hauptständers links:


Die Originalschraube der unteren Verschraubung des Seitenständers demontieren (entfällt).

Die Befestigung des Hauptständers erfolgt an der nun freien Bohrung mit der Zylinderschraube M10x45 sowie der U-Scheibe Ø10,5.

Von hinten mit der Gewindebuchse M10 verschrauben.

Drehflächen zuvor einfetten.


**Sicherungsmittel verwenden.**




1x



1x



1x

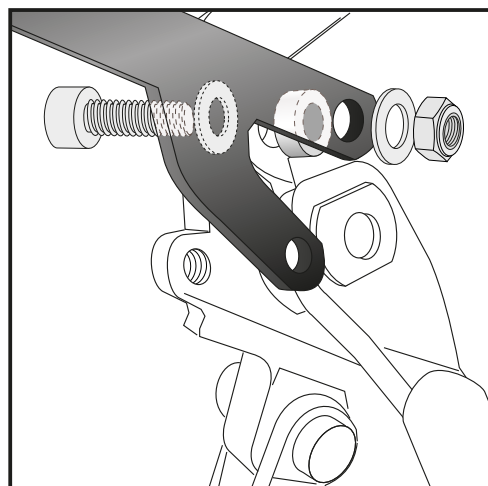


**3**

### Befestigung des Anschlaghalters oben:

Dieser wird links am Motorrad montiert. Die obere Schraube des Seitenständers demontieren (entfällt). Den Halter von der Rückseite her montieren, hierzu die Zylinderschraube M10x45 sowie die U-Scheibe Ø10,5 verwenden. Von hinten mit der U-Scheibe Ø10,5 sowie selbstsichernder Mutter M10 verschrauben.


Zwischen Halter und Rahmen die Aludistanz Ø25xØ11x5mm fügen.




1x



2x



1x



1x

# Hauptständer

TRIUMPH Tiger 800

(-2014)

Art.-Nr.: 5057505 00 01 schwarz


TRIUMPH Tiger 800 XR / XRX / XRT

(2015-)

Art.-Nr.: 5057536 00 01 schwarz




## Montage

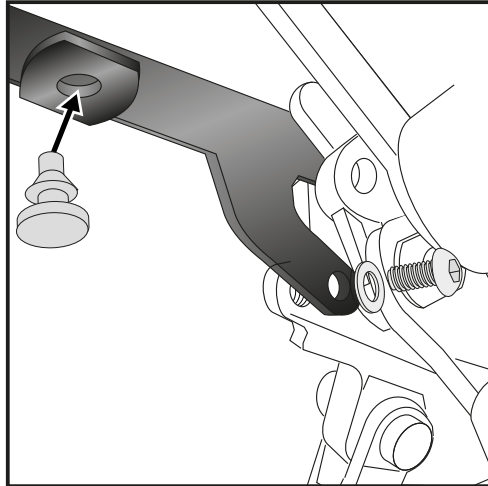

**4**

### Befestigung des Anschlaghalters unten:


An der freien Gewindebohrung am Halter des Seitenständers. Hierzu die Linsenkopfschraube M8x20 sowie die U-Scheibe Ø8,4 verwenden. Diese wird von hinten montiert. Anschlaggummi einsetzen.




1x



1x



1x

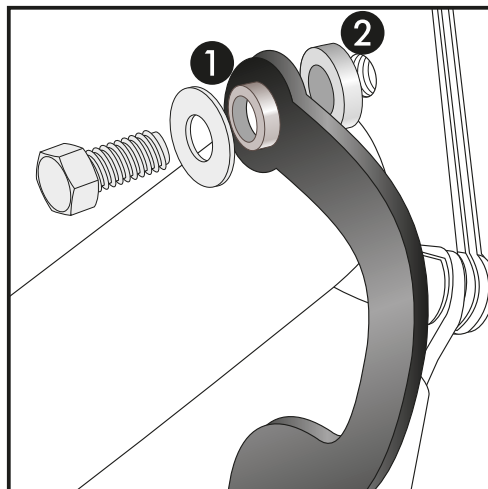

**5**


### Befestigung der Federverlängerung rechts:

an der Rückseite des Rahmenauslegers hinter dem Bremshebel an der freien Gewindebohrung mit der Sechskantschraube M6x25 sowie der Karoseriescheibe Ø6,4 x 18 verschrauben.


In die Bohrung der Federverlängerung die Stahldistanz Ø10xØ7x7mm stecken. ①

Zwischen Stahldistanz und Rahmen die Aludistanz Ø13xØ7x7mm fügen. ② Vorher Flächen einfetten.

Nach dem Festziehen prüfen, ob sich die Federverlängerung frei drehen lässt.




1x




1x



1x



1x

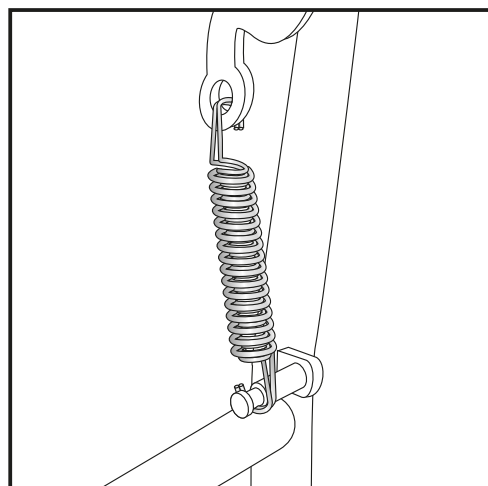


**6**

### Befestigung der Feder:

Die Feder wird oben an der Federverlängerung eingehängt.

Dann die Feder am Bolzen des Hauptständers einhängen.

Wir empfehlen hierfür das als Zubehör erhältliche Federmontage-Werkzeug (Art.-Nr.: 710134)



1x

## Center stand

**TRIUMPH Tiger 800**  
(-2014)

Item-No.: **5057505 00 01** black

**TRIUMPH Tiger 800 XR / XRX / XRT**  
(2015-)


Item-No.: **5057536 00 01** black



### Assembling instructions

#### Content:

- 1x 700007606 center stand
- 1x 700007607 stop adapter
- 1x 700010613 screw kit:
- 1x 700007608 spring (M29427)
- 1x 700007611 spring adapter
- 1x rubber
- 2x threaded socket M10
- 1x allen screw M10x25
- 1x alu spacer  
Ø13xØ7x7mm
- 1x alu spacer  
Ø25xØ11x5mm
- 2x allen screw  
M10x45
- 1x steel spacer  
Ø10xØ7x7mm
- 1x filister head screw  
M8x20
- 1x hexagon bolt  
M6x25
- 4x washer Ø10,5
- 1x body washer  
Ø6,4xØ18
- 1x washer Ø8,4
- 1x self lock nut M10

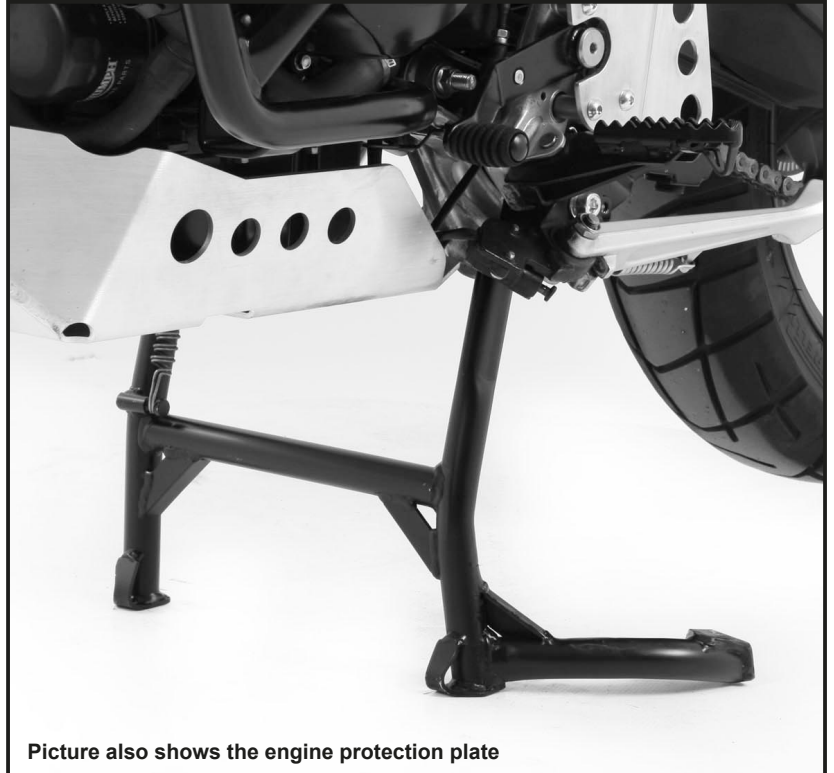

Picture also shows the engine protection plate

**Please check now the function of your centre stand and control all assembled screw connections for tightness! Please notice our enclosed service information. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque. Liquid thread-locker (i.e., „Locktite“) should be used to secure all screws, bolts, and nuts.**

#### General:

##### Centre stand cornering clearance:

HEPCO & BECKER centerstands are carefully designed and tested to eliminate reductions in cornering clearance and ground clearance under most driving conditions on an unmodified stock motorcycle, and are certified to be compliant with European ABE safety standards. Use of any centrestand may reduce cornering clearance or ground clearance under extreme driving situations. HEPCO & BECKER products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer.

HEPCO & BECKER takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hard ware provided by HEPCO & BECKER, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle.

The side-sway-behavior may be restricted by the centre stand.



**Hepco & Becker GmbH**  
**An der Steinmauer 6**  
**D-66955 Pirmasens**  
**Germany**

**Tel.: +49 6331 - 1453 - 100**  
**Fax: +49 6331 - 1453 - 120**  
**eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)**  
**[www.hepco-becker.de](http://www.hepco-becker.de)**

## Center stand

TRIUMPH Tiger 800

(-2014)


Item-No.: 5057505 00 01 black

TRIUMPH Tiger 800 XR / XRX / XRT  
(2015-)

Item-No.: 5057536 00 01 black



### Assembling instructions

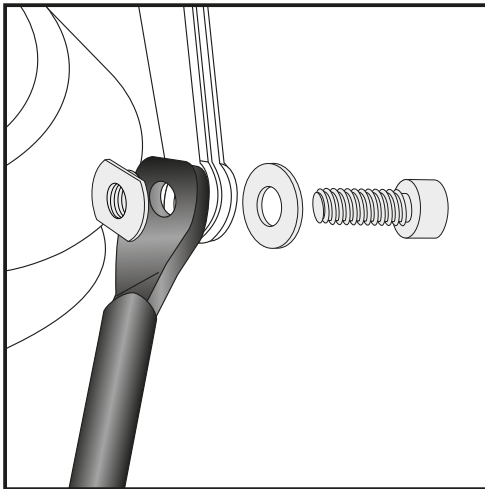

**1**


Fastening of the center stand right: \_\_\_\_\_

under the footrest at the free boring with allen screw M10x25 with washer  $\text{\O}10,5$ .

At the inner side stick the threaded sockets M10 into the boring in the center stand.

Grease the surfaces before mounting.


Use liquid thread-locker.




1x



1x



1x

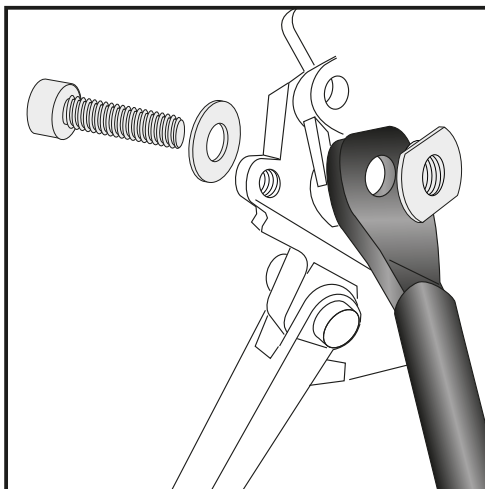

**2**


Fastening of the center stand left: \_\_\_\_\_

at the lower bolting of the side stand - original screw is obsolete. Use allen screw M10x45 with washer  $\text{\O}10,5$ .

At the inner side stick the threaded sockets M10 into the boring in the center stand.

Grease the surfaces before mounting.


Use liquid thread-locker.




1x



1x



1x

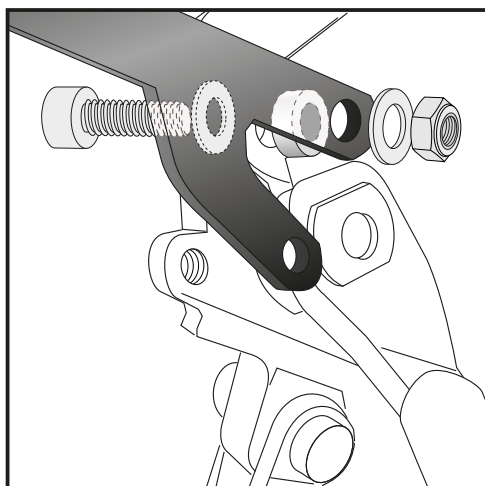


**3**

Fastening of the stop adapter top left: \_\_\_\_\_

at the top bolting of the side stand - original screw is obsolete. Use allen screw M10x45 with washer  $\text{\O}10,5$ .

At the inner side use washer  $\text{\O}10,5$  with self lock nut M10.


Sandwich alu spacer  $\text{\O}25 \times \text{\O}11 \times 5\text{mm}$  between adapter and frame.



1x



2x



1x



1x

## Center stand

TRIUMPH Tiger 800

(-2014)

Item-No.: 5057505 00 01 black


TRIUMPH Tiger 800 XR / XRX / XRT

(2015-)

Item-No.: 5057536 00 01 black




### Assembling instructions

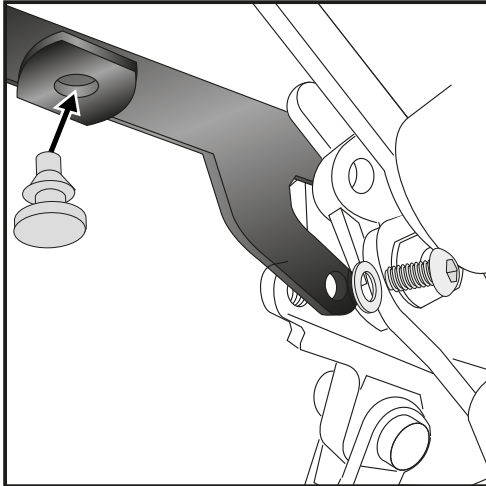

**4**

#### Fastening of the stop adapter bottom:


at the free threaded bolting of the side stand from the inner side.  
Use filister head screw screw M8x20 with washers Ø8,4.




1x



1x



1x

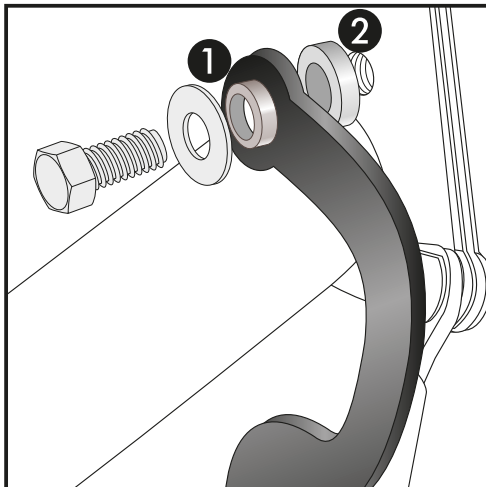

**5**


#### Fastening of the spring adapter right:

at the free threaded bolting on the inner side of the frame with  
hexagon bolt M6x25 with body washer Ø6,4 verschrauben.

Put steel spacer Ø10xØ7x7mm ① into the boring of the spring  
adapter.

Sandwich alu spacer Ø13xØ7x7mm ② between adapter and frame.  
Grease the surfaces before mounting.


Tighten the screws only to the extent that the spring adapter is still  
rotating free.




1x




1x



1x



1x

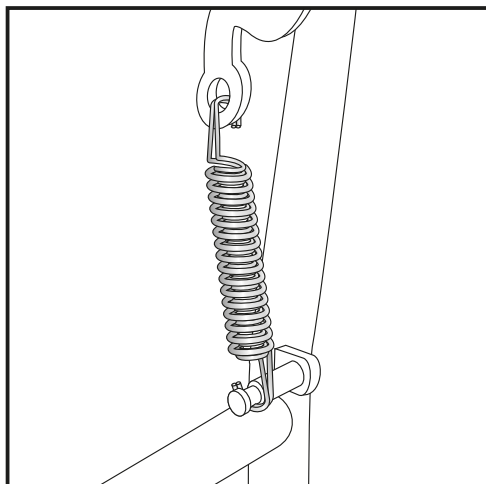


**6**

#### Fastening of the spring:

The springs will be fixed at the spring adapter and at the pin of the  
center stand.

We recommend our spring-mounting kit (item.-No.: 710134)



1x