

Attention




Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.

Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.

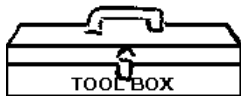

TOOLS REQUIRED:
 Phillips Screwdriver
 4mm Hex Key Wrench

PARTS LIST

<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	Windshield, FMR Coated polycarbonate	1

INSTALLATION



Retain all fasteners and front plates, as they will be reused.

1. Remove outer plates and stock windshield. (**Phillips Screw Driver**)

2. Place VStream Windshield into position on motorcycle. Install windshield using stock screws and front plates. (**Phillips Screw Driver**) Tighten the screws firmly. **Do not over tighten**



The VStrom has a height adjustable mount plate. The National Cycle N20213 will function in any position. To change mount plate to higher position remove the Hex Screws and Washers from 4 locations, slide mount plate upward and re-install hardware. **Tighten firmly, do not over tighten (4mm Hex Key Wrench). Figure 1**



Final adjustment. Check clearance at full fork lock left and right. VStream is designed to clear mirrors. Adjust mirrors if necessary. **Figure 2**



Figure 1



Figure 2

MAINTENANCE

Cleaning: Wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Do not use rain protective products on the screen due to the solvent action of the alcohol in these products. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.