



Quantum® Hardcoated Polycarbonate  
VStream® Windscreens for  
Triumph® Tiger 850 Sport  
Triumph® Tiger 900 Full Range



VStream®

VStream® Windscreen Patent No. 7,387,328

N20609 Dk.Tint, Low  
N20610 Lt.Tint, Mid

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windshield for a customer, please give them this manual upon completion. It contains information needed to properly maintain and use this product.

Description:	VStream® Replacement Windscreen	Model:	2021-Later Tiger 850; 2000-Later Tiger 900
Part Number:	N20609/N20610	Installation Time:	15 min. Difficulty Level: Easy

**PACKAGE CONTENTS**

ITEM	PART NO.	DESCRIPTION	QTY.
A		VStream Windscreen	1

**BAG#1400**

B	75-762015-000	Washer, .625x.25x.062, Neoprene, Black	4
---	---------------	--	---

**TOOLS REQUIRED**

5mm Allen Wrench



**ATTENTION:** Special notes and cautionary measures which can prevent damage to the accessory or vehicle.



**NOTE:** Tips for facilitation of operation, control and adjustment, as well as maintenance work.



Figure 1

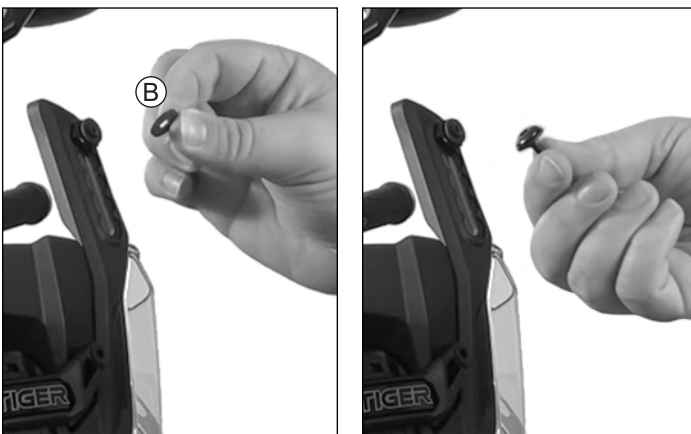


Figure 2

**PREPARATION**

Place motorcycle securely on its sidestand.

**OEM WINDSCREEN REMOVAL**

**Figure 1**

With a 5mm Allen Wrench, loosen and remove all four screws holding the OEM Windscreen to the mounting bracket.

**Figure 2**

The BAG#1400 included with your new Windscreen contains four Neoprene Washers (B). Assemble these to the four OEM screws you just removed, then set them aside for later reinstallation.

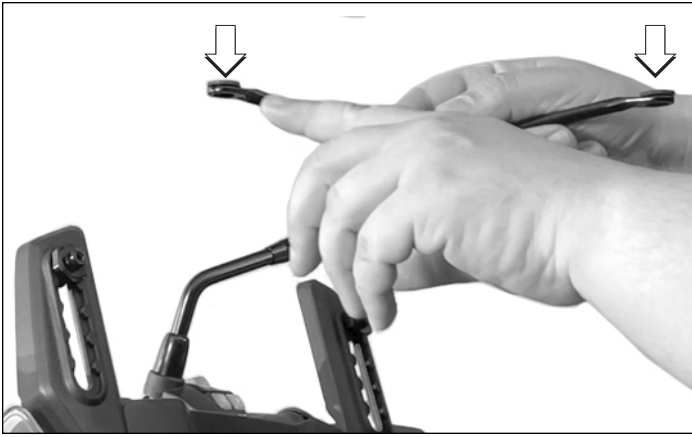


Figure 3



Figure 4



Figure 5

## WINDSCREEN INSTALLATION

### Figure 3

The bike's OEM windshield adjustment bracket comes loose with the OEM windscreen, but will need to be reinstalled along with the OEM rubber washers.

The top two rubber washers go on the higher forward-facing sides of the adjustment brackets. If you have difficulty keeping them in place, a thin film of common dish soap will adhere them long enough to complete installation.



**ATTENTION:** Do not use grease, oil, threadlocker or any type of glue on these washers.

### Figure 4

Here it would be helpful to have a third hand to hold the adjustment bracket in the correct position while the VStream Windscreen is placed over the OEM mount points.

Make sure the two rubber washers are in place between the adjustment bracket and the Windscreen.

### Figure 5

Take the four OEM screws you removed earlier, with the new Neoprene Washers (**B**) you added to them, and thread them through the Windscreen's mount holes and into the bike's windscreen mounting bracket.

Tighten them securely with a 5mm Allen Wrench.

Your new VStream Windscreen is now installed and ready for miles and miles of enjoyment.

***Ride safe and enjoy your new VStream Windscreen!***



## CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth and plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or grease removal: Moisten cotton wad with naphtha or turpentine followed by a wash as above.

National Cycle Shield Wash™ (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors

*Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with household glass cleaners. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.*

## RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's RainZip® (N1410-01) to keep your wind-screen clear in rainy weather.



Register Your Windshield Online at [www.nationalcycle.com](http://www.nationalcycle.com)

### National Cycle 3-Year Limited Warranty

National Cycle hereby warrants to the original registered owner of a National Cycle polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all National Cycle windshields.

Visit [www.nationalcycle.com](http://www.nationalcycle.com) for further details, or call 708-343-0400 or e-mail [info@nationalcycle.com](mailto:info@nationalcycle.com).

## WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

*Sunlight reflected off the inside curvature of the windscreen can, at certain times of day, cause extreme heat buildup on the motorcycle's instruments and possibly even melt them. Exercise care in parking to avoid this. Park your motorcycle facing the sun or place an opaque object over this area.*