






Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.

 <p>Attention: Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.</p>	 <p>Note: Tips for facilitation of operation, control and adjustment, as well as maintenance work.</p>
---	--

CONTENTS OF KIT


Item	Description	Part No.	Qty.	Notes and Tools
1	VStream® Windscreen		1	
2	Bracket, Left	37-374482-000	1	Left and Right are determined while sitting on motorcycle
3	Bracket, Right	37-374483-000	1	Shown in Figure 2
Bag#1286				
4	Grommet	44-447350-000	4	
5	Collar .334L	49-495593-000	4	
6	Screw, M6 x 20	51-514221-000	4	5mm Hex Key
7	Cap Trim, Black	34-346047-000	4	
8	Nut, Hex, Cap, M6	42-483005-000	4	10mm Box or Open End Wrench

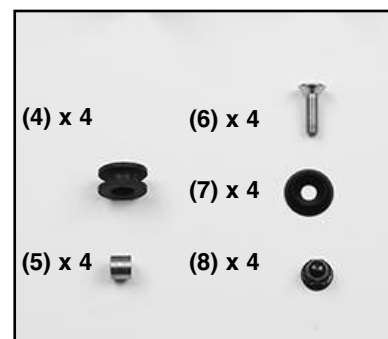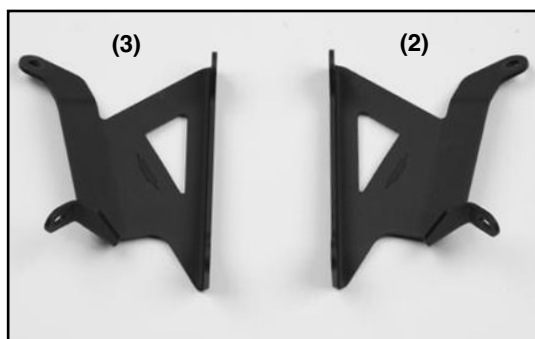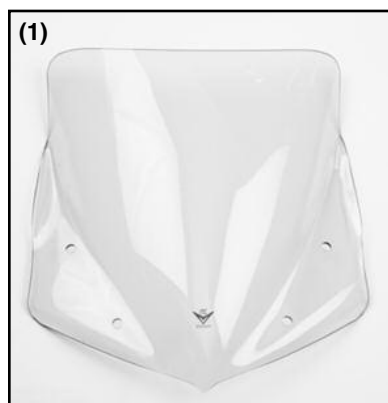

TOOLS

12mm Box Wrench
 10mm Box Wrench
 5mm Hex Key

PREPARATION

 **Left and Right are determined while sitting on the motorcycle.**

1. Place motorcycle securely on its side stand.

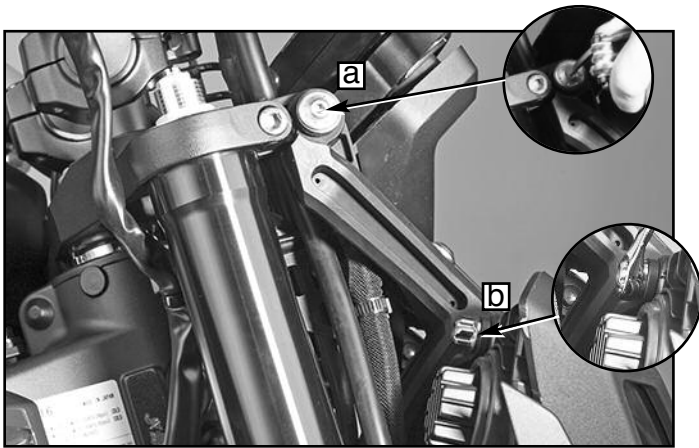


Figure 1

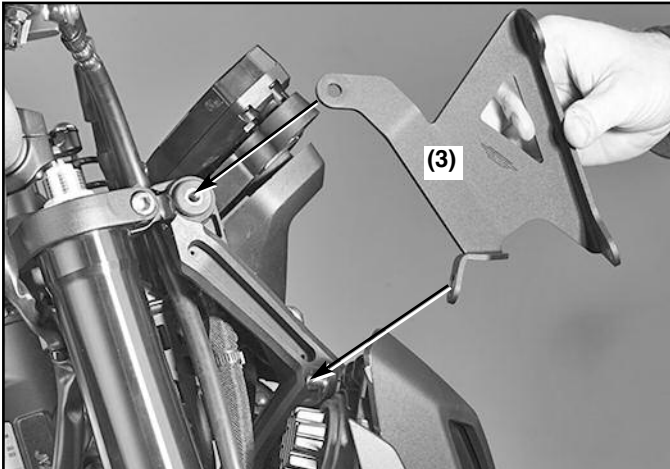


Figure 2



Figure 3

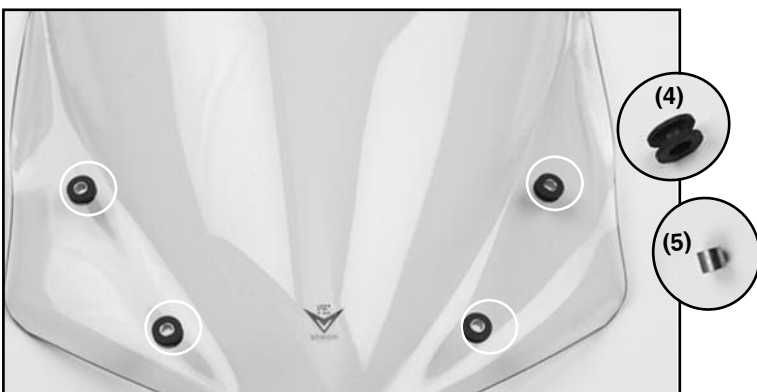


Figure 4

INSTALLATION

1. On the right side of the motorcycle, remove the upper hex screw (a) (**5mm Hex Key**) and lower nut (b) (**12mm open end wrench**) from the side of the headlight bracket. Hardware will be re-used. **Figure 1**

2. Using Stock hardware, install the Right Side Bracket (3) onto the motorcycle. Tighten stock hardware firmly. (**5mm Hex Key and 12mm Open End Wrench**) **Figure 2 and 3**

3. Repeat procedure for Left Side of motorcycle using Bracket (2). (**5mm Hex Key and 12mm Open End Wrench**)

Install Windshield

4. Lay new VStream Windscreen on a clean work surface and install four Rubber Grommets (4) into the mounting holes. **Figure 4**

5. Insert a Collar (5) into the Grommet. **Figure 4**



Figure 5

6. Install VStream Windscreen to Brackets using Screws (6), Trim Caps (7) and Cap Nuts (8). (5mm Hex Key and 10mm Socket Wrench) Figure 5

CLEANING AND MAINTENANCE To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with naphtha or turpentine followed by a wash as above. National Cycle **Shield Wash™** (N1401-01) makes a good daily cleaner and comes with a handy travel size bottle. Shield Wash is safe for all windshields and helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners.

Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** (N1410-01) to keep your windscreen clear in rainy weather.



! WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrener Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.

VStream® windshield patent no. 7,387,328

National Cycle, Inc. PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e-mail: info@nationalcycle.com